

iRespond Student Remote

To switch between Numbers and Letters

Press and hold the CLR button to switch between "Alpha Type" mode for letters and "Numeric Type" for numbers.

LED Screen

Displays question numbers and answers to be submitted. The number on the left is the question number currently being answered. The number on the right is the number of total questions on the test.

Power Button

Power **ON** - Press and release quickly
Power **OFF** - Press and hold until remotes powers down (bars will appear across the screen).
Note: Remotes will automatically power down when session is closed.

GO Button

During an assessment, to go back to a question, press **GO**, the **question number you** wish to return and **SEND**. Check your answers and make any necessary changes.

Arrow Buttons

During Assessment:
Allows students to move backward or forward through the questions an assessment.
Completion of Assessment:
Logout No? will appear once last question is submitted. If you do not want to logout, press **SEND**. You will be taken to the last question. Use the arrow buttons to go

Flag Button

During the test, you can flag a question to come back to later. A question mark will appear for that answer. To quickly view your flagged questions, press **GO** followed by the **FLAG** button. The remote will cycle through each question you flagged. Pressing the **FLAG** button will remove the question mark.

To Change an Answer

Multiple Choice - enter the new answer to erase and replace the original answer.
Multiple Response - to erase the incorrect answer, press the same letter to erase then press the new answer. Press **Send**.
Fill-In - use the **CLR** (clear) button to backspace and erase your answer. Type the new answer and press **Send**.

