



QuickStart setup guide

Using the RM Classpad with USB Cable

You can use the RM Classpad immediately out of the box, while charging the battery. To use the RM Classpad immediately:

- A. Plug the small end of the USB cable into the RM Classpad.
- B. Plug the flat end of the USB cable into an available USB port on your computer. You can use the RM Classpad immediately.

NOTE: Do not connect both the RM Classpad and the receiver unit to your computer simultaneously.

Using the RM Classpad Pen

Below are a few tips for using the RM Classpad pen:

Right Click – to use the equivalent of a right-click with your mouse button, press the bottom of the pen toggle switch.

Left Click – to use the equivalent of a left-click with your mouse button, press the pen tip to the RM Classpad.

Double Click – to use the equivalent of a double-click with your mouse button, quickly tap the pen tip twice to the RM Classpad.


Scroll – to use the pen to scroll up or down a page, press and hold the upper pen toggle switch, then move the pen either up or down.

Pen Laser – to use the pen laser as a pointer, press and hold the laser button on the pen.

Charge the Pen – the pen charges automatically each time you put the pen back into the pen cradle on the RM Classpad. The LED light on the RM Classpad blinks red while the pen charges.

Technical Support

RM Education supports your instructional activities with the RM Classpad. If you have any questions about your RM Classpad, please call 866.728.6758 Monday through Friday between 8:30am and 5pm (EST).

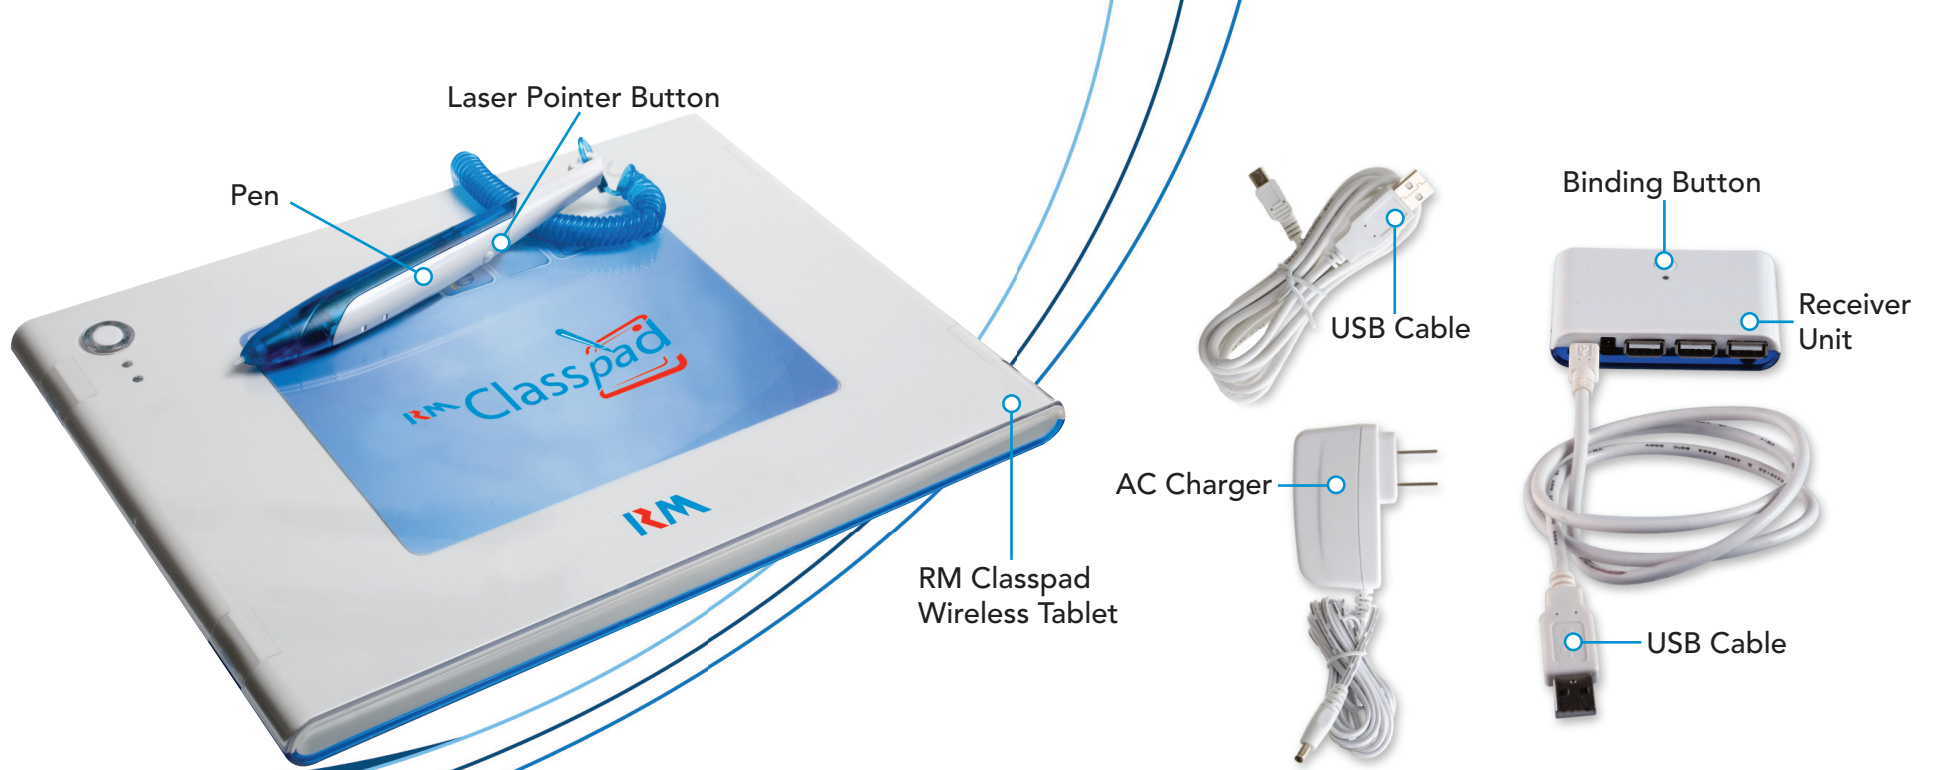

Your RM Classpad includes the [wireless tablet](#), [pen](#), [receiver unit](#), [AC charger](#), and [two USB cables](#). If any of these items are missing, please contact RM Education at 866.728.6758.

NOTE: Before using your RM Classpad, make sure to remove the clear plastic tab from the pen.

1

Connecting the RM Classpad Battery

Before you can use the RM Classpad wirelessly, you will need to connect the battery. To connect the battery:

- Remove the battery cover on the back of the RM Classpad. Remove the battery.
- Connect the battery by plugging in the white battery connector to the battery connection in the RM Classpad.
- Place the battery back into the RM Classpad. Place the battery cover back onto the RM Classpad.

2

Charging your RM Classpad

The RM Classpad uses a rechargeable Li-Polymer battery. To charge the battery:

- Connect the AC/DC adapter to the RM Classpad.
- Plug the AC/DC adapter into an outlet.
- Charge the battery initially for 10 hours before using wirelessly.

The red LED light on the RM Classpad will blink as the RM Classpad charges.

To use the RM Classpad without first charging the battery, you will need to connect the RM Classpad to your computer via a USB cable. For more information, please see "Using the RM Classpad with USB Cable" on the back of this QuickStart Guide.

3

Using the RM Classpad Wirelessly

To use the RM Classpad wirelessly, you will need to sync the RM Classpad to the receiver unit. To sync the RM Classpad:

- Plug the receiver unit into a USB port on your computer. A light will turn solid green on the receiver.
- Press the binding button on the receiver unit, then quickly, using the RM Classpad pen, press the sync button on the back of the RM Classpad (shown in image).

When the RM Classpad syncs with the receiver unit, the blinking green light on the receiver unit stops blinking and remains green. When you use the RM Classpad, the receiver unit light turns red to indicate that the two are communicating.

Sync Button



For more information on using the RM Classpad, please see the back of the QuickStart guide.